


FUEL FILTER LOCATOR CHART

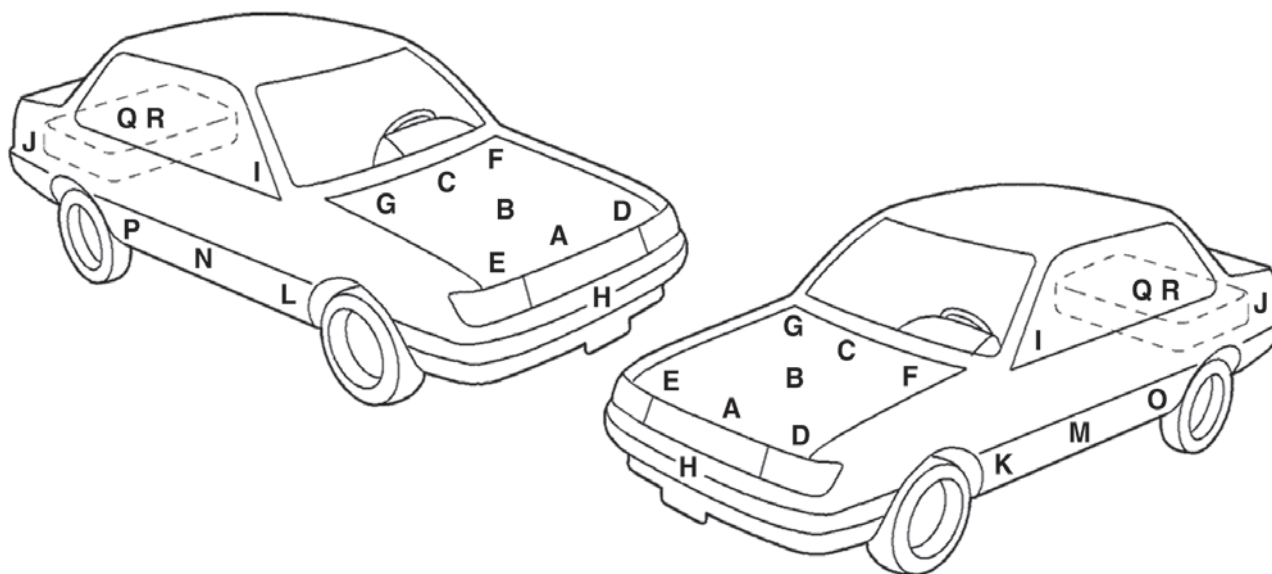

Engine Compartment (EC):

F = Front
 C = Center
 R = Rear
 PS = Pass. Side
 DS = Driver Side

Frame (FR):

F = Front
 C = Center
 R = Rear
 PS = Pass. Side
 DS = Driver Side
 FTA = Fuel Tank Area
 IFT = In Fuel Tank

A = ECF = ENGINE COMPARTMENT FRONT
 B = ECC = ENGINE COMPARTMENT CENTER
 C = ECR = ENGINE COMPARTMENT REAR
 D = ECFDS = ENGINE COMPARTMENT FRONT DRIVER SIDE
 E = ECFPS = ENGINE COMPARTMENT FRONT PASSENGER SIDE
 F = ECRDS = ENGINE COMPARTMENT REAR DRIVER SIDE
 G = ECRPS = ENGINE COMPARTMENT REAR PASSENGER SIDE
 H = FRF = FRAME FRONT
 I = FRC = FRAME CENTER
 J = FRR = FRAME REAR
 K = FRFDS = FRAME FRONT DRIVER SIDE
 L = FRFPS = FRAME FRONT PASSENGER SIDE
 M = FRCDS = FRAME CENTER DRIVER SIDE
 N = FRCPS = FRAME CENTER PASSENGER SIDE
 O = FRRDS = FRAME REAR DRIVER SIDE
 P = FRRPS = FRAME REAR PASSENGER SIDE
 Q = FTA = FUEL TANK AREA
 R = IFT = IN FUEL TANK