

# AMSOIL Fluid Extraction Pump

## **Warning:**

Prior to installing fluids into the desired system, AMSOIL recommends thoroughly cleaning the internal components, pump cylinder, and hose.

This product is not recommended for use with gasoline or brake fluid.

## **Assembly:**

Slide the 12-inch nylon hose over the fitting on the end of the Fluid Extraction Gun until hose fits tightly. If needed, a small coat of oil may be used to lubricate the hose fitting for easier installation.

## **Operation:**

The Fluid Extraction Gun operates simply by pulling the handle back to remove the fluid from reservoir. (Note: The Fluid Extraction Reservoir extracts approximately 16 fl. oz. per cycle)

To remove fluid from reservoir, simply push handle back to release fluid.

Fluids that are cold will be more difficult to extract. When possible, start vehicle for a short amount of time to allow fluids to heat slightly before removing.

## **Maintenance:**

The rubber suction piston is oil resistant to a number of products such as motor oil, coolant, power steering fluid, transmission fluid and gear oil. However, it is recommended for longer service life to wipe dry with a clean cloth, all contacting parts of the Fluid Extraction Gun after every usage.