

Installation Instruction for Spin-On Filters

The spin-on oil filter is replaced more often than any other service part on your vehicle. To insure normal oil filter service life and prevent oil leakage or possible internal engine damage, the following procedure should be followed when replacing spin-on oil filters.

1) Open hood, remove the oil fill cap and place cap on air filter cover or any other flat visible surface. (This will serve as a reminder that oil has not been added to the crankcase).

2) Raise the vehicle and remove the oil drain plug(s), drain the oil and replace the drain plug(s). If drain plug(s) has a crush ring or gasket, check it for serviceability. If unserviceable, replace the ring or gasket.

3) Remove the oil filter using an oil filter wrench, if necessary.

4) Clean mounting base, making sure the old oil filter gasket is not stuck to the base. Apply a light film of clean oil to the new filter gasket. Note: Never use grease to lubricate the gasket.

5) Screw the new filter on carefully, avoiding cross-threading. On turbocharged engines, it may be necessary to fill the filter with clean engine oil prior to installation. Check engine manufacturer's recommendations. After the sealing gasket contacts the mounting base, tighten the filter per the instructions found on the filter or filter box. **DO NOT OVER TIGHTEN.**

6) Lower the vehicle, and fill the crankcase to the recommended level with oil as per the manufacturer's specifications and install the oil fill cap. Start the engine and insure that the engine oil pressure light



goes out or the oil pressure comes up to normal on the oil pressure gauge.

7) Turn off the engine and check the dipstick reading. Add additional oil, if needed.


8) Start engine, raise the vehicle and check for oil leakage around the oil filter and drain plug.

9) Lower the vehicle, turn off the engine and close the hood.

10) Check local, state and federal regulations for the proper disposal of your used oil and filters.



Typical wrench styles used for filter removal or installation

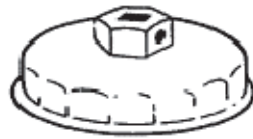

Cup Wrench




Strap Wrench



Heavy Duty Wrench

For additional information, contact:



Filter Manufacturers Council
P.O. Box 13966
Research Triangle Park, NC 27709-3966
Phone: 919/406-8817 Fax: 919/406-1306
www.filtercouncil.org
Administered by Motor & Equipment Manufacturers Association

